ALCATEL 0S6900

Alcatel-Lucent 0S6900-X20 7.3.3.384.R01 GA

aaa authentication snmp local snmp security no-security user monitorxx password xxxxxxxx read-only all no auth snmp community-map snmp-readxx user monitorxx enable snmp community-map mode enable snmp station 10.x.x.x 161 v2 enable write memory copy running certified

.

ALCATEL 0S6850/0S6450



 ODD
 SNMP
 ODD
 ODD

aaa authentication snmp "local"

(2) <u>SNMP</u> security

snmp security no security

user monitor password monitor123 READ-ONLY all no auth

snmp community map yourcommunity user monitor on

snmp station 192.168.1.200 161 v2 enable

write memory copy working certified